

# Moxa PCI

**-SCO**

**2006-3-13**

CP-102U      CP-104U      C104H/PCI      CP-168U      C168H/PCI  
 CP-132U      CP-118U      CP-134U  
 Sco Unix


 



 


 
 
 
 

 
 
 
 
 
 


```

1          PCI

2
3  pwd                      /*
4  dosdir a:                 /*  A          scox × .tar      A      DOS
5  doscp a:/scox × .tar /   /*
6  tar xvf scox × .tar
7  cd /tmp/moxa
8  ./mxinstall
9          1                  Sco Openserver 5
10         5
11         CP-168U
12         kernel

13  mxadm                    /*  Moxa
14  port monitoring          tty

1  moxaadm                    terminal emulator      2          2  moxaadm
2
3
4
    
```

RS-232	RS-422	2 RS-485	4 RS-485
TxD  TxD RxD  RxD RTS  RTS CTS  CTS DSR  DSR DTR  DTR GND  GND DCD  DCD	TxD+(B)  RxD+(B) TxD-(A)  RxD-(A) RxD+(B)  TxD+(B) RxD-(A)  TxD-(A) GND  GND	Data+(B)  Data+(B) Data-(A)  Data-(A) GND  GND	TxD+(B)  RxD+(B) TxD-(A)  RxD-(A) RxD+(B)  TxD+(B) RxD-(A)  TxD-(A) GND  GND